


MINI-X HEATER- Installation Diagram for Separate Control

NOTE:
Do not place the sensors too near to air ventilation (not under 1000mm) or not under 500mm from air ventilation, which is directed away from sensors.

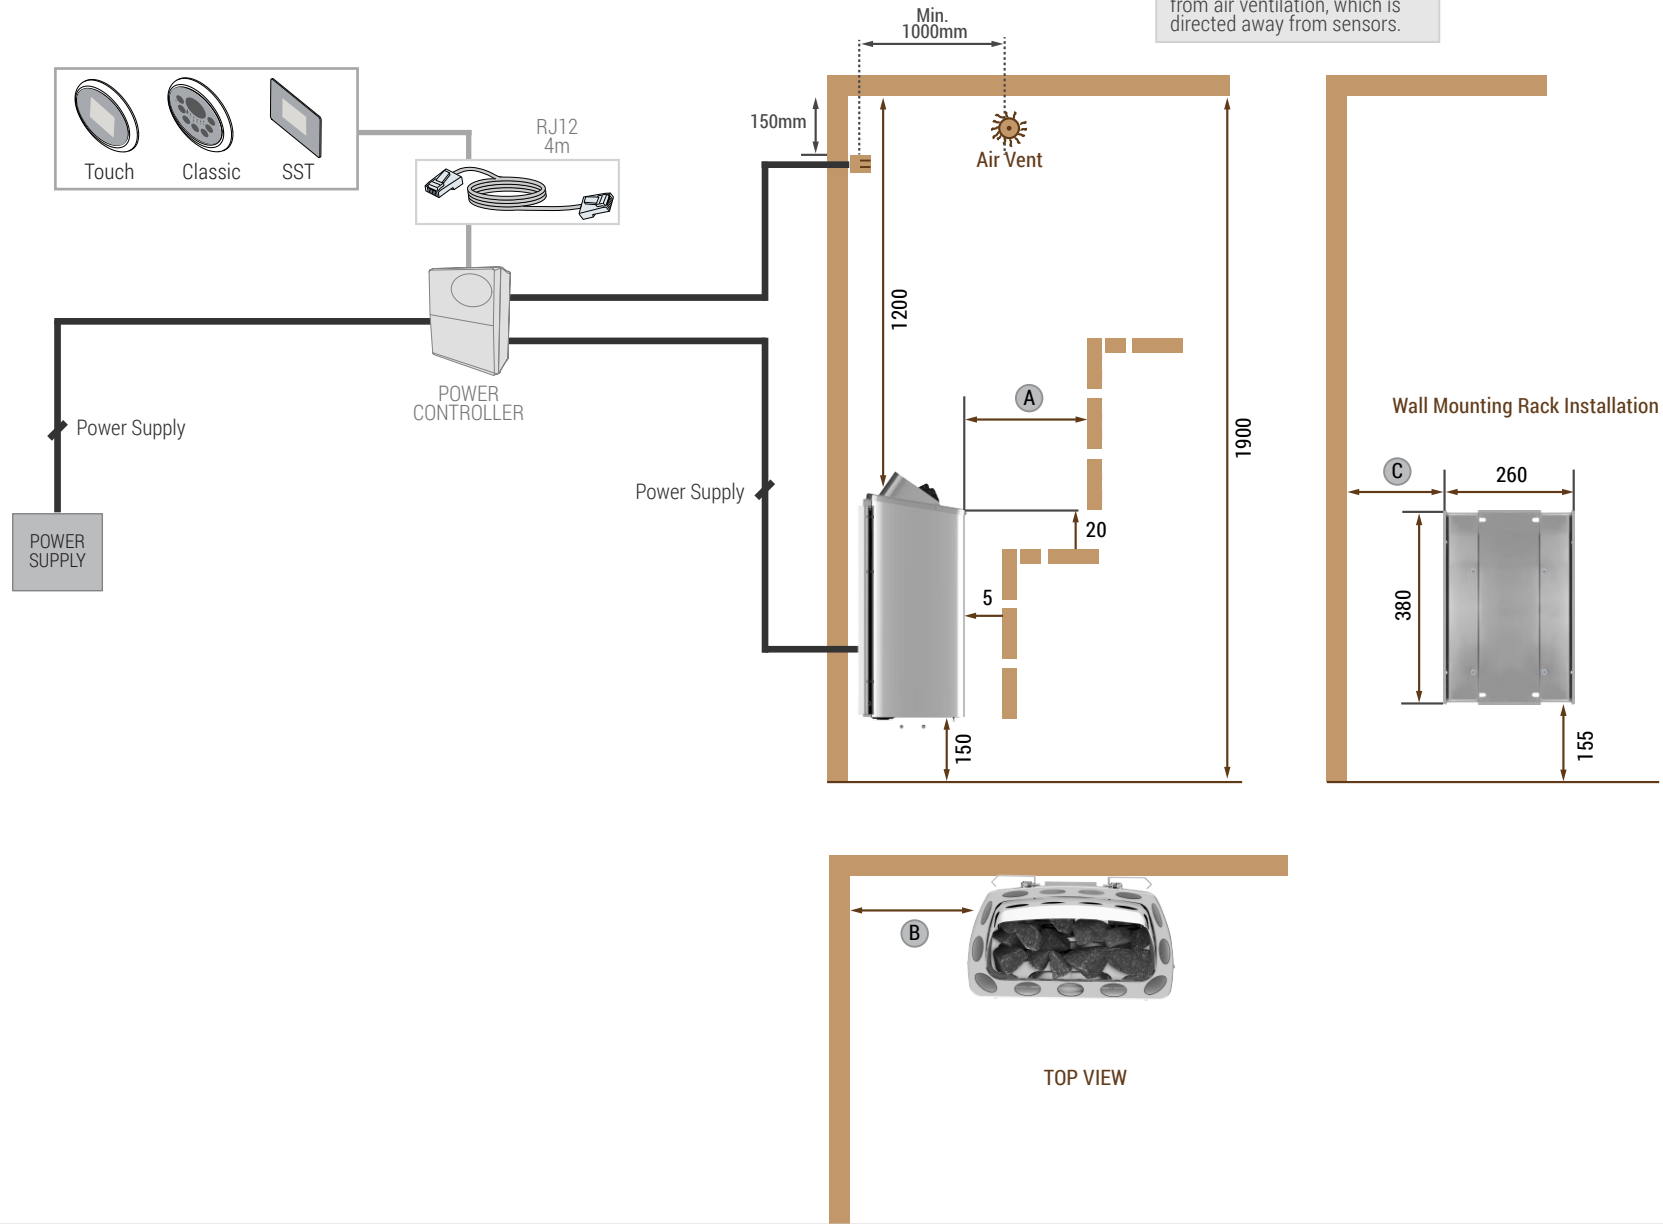


Minimum Safety Distances

	A	B	C
MX-23NS	30	20	60
MX-30NS	35	25	65
MX-36NS	40	25	65

MINI-X HEATER- Installation Diagram for Built-in Control

Minimum Safety Distances

	A	B	C
MX-23NB	30	20	60
MX-30NB	35	25	65
MX-36NB	40	25	65

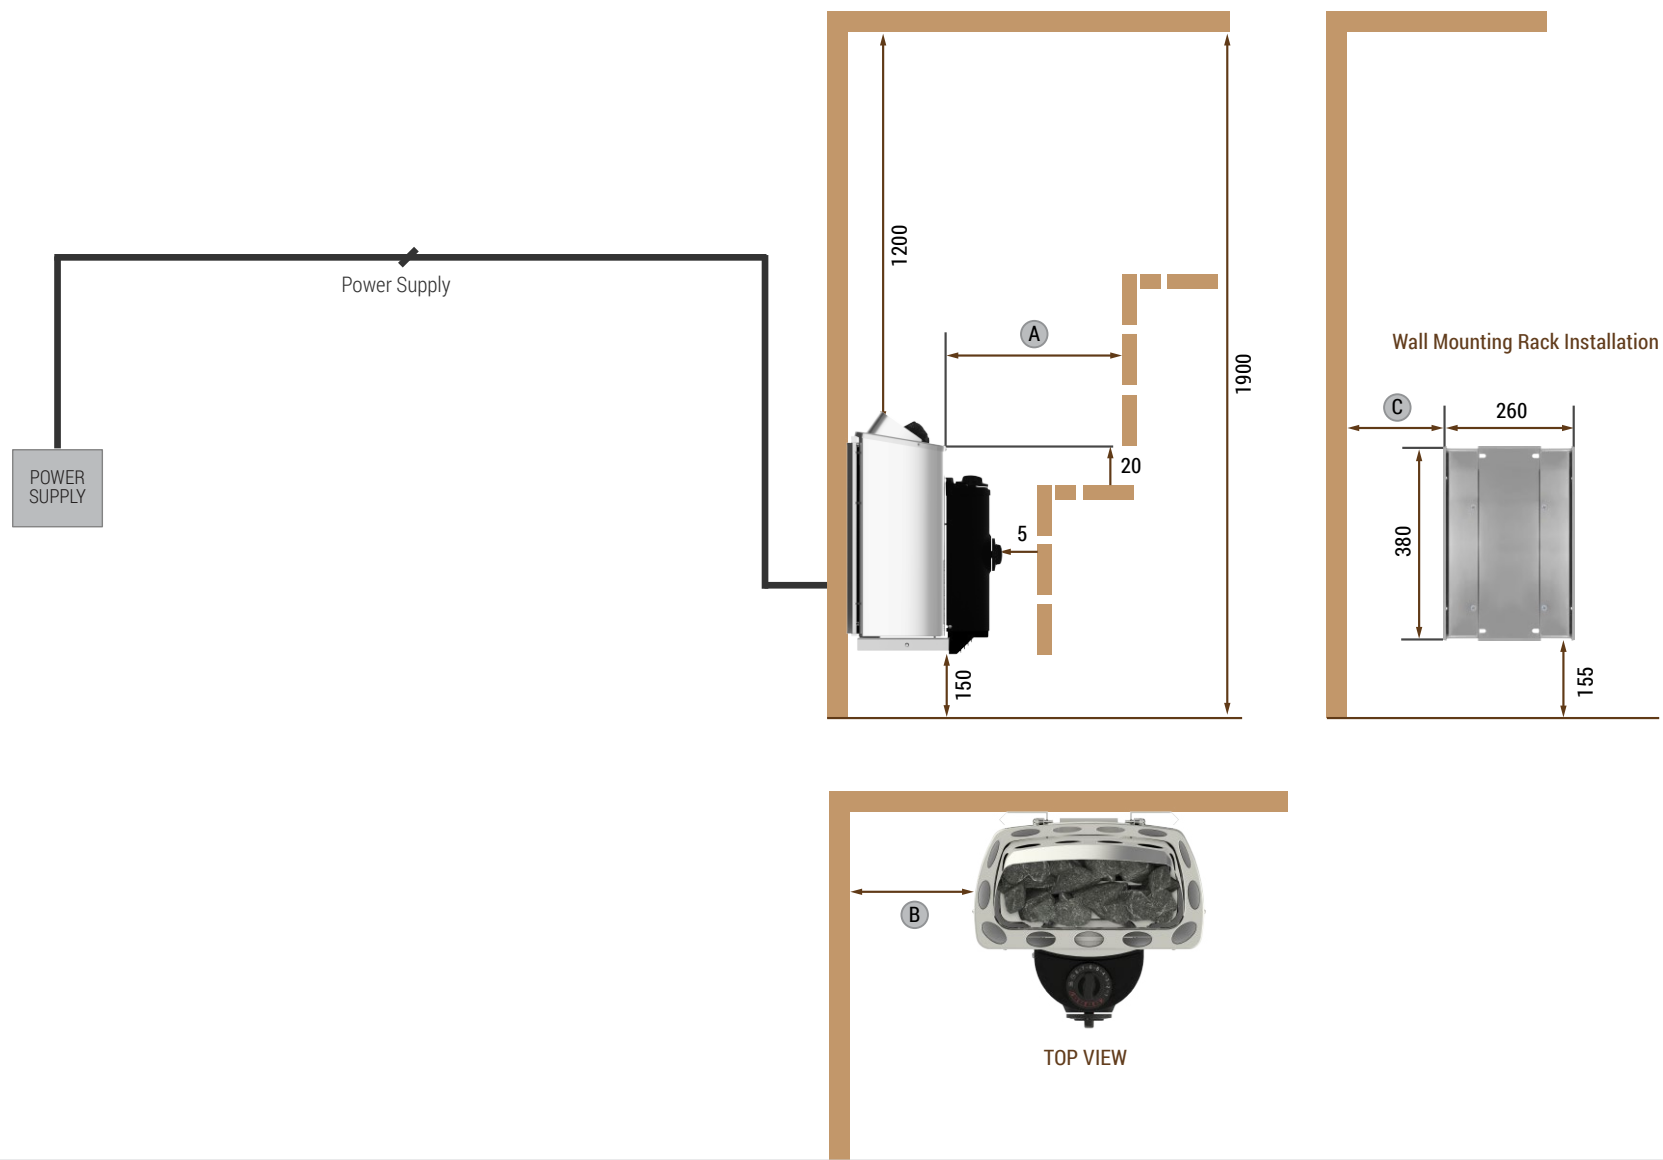

TOP VIEW